

DC (4 Speed Motor Controls) -- ACCESSORIES:

4 Speed DC Fans are Pull Chain




980002FBK-xxx
Accessory w/WiFi



980001FWH
Accessory

Hard Wired Control
Requires 3rd wire to Fan
for Light Control

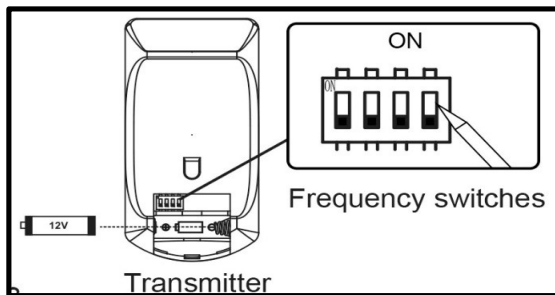

980002FBK-xxx

Code Switches

16 Possibilities

Battery: 12v/23A

BT980012V

CAUTION: When pairing fans be sure ONLY the fan being paired is powered up.

- A- **To Pair** (980002) Remote: In remote transmitter, set code switches to unique 4 digit code.
Press and hold Fan **on/off button** for 5 seconds within 60 seconds of power being turned on.
- B- **To Pair** (980001) Wall Control: This control is a hard wired control and does not need paired.

CAUTION: Pull Chain Fans: MAKE SURE CHAIN IS IN HIGH SPEED POSITION

C- Fan paired to wrong transmitter:

- aa- Inside remote battery door, set code switches to a DIFFERENT unique 4 digit code.
- bb- Re-pair to fan using procedure in "A" above.

DC (4 Speed Motor Controls) -- ACCESSORIES:

4 Speed DC Fans are Pull Chain

D- Factory Reset

- aa- Turn main power OFF to the Fans.
- bb- Turn main power ON ONLY for THE FAN NEEDING THE FACTORY RESET.
- cc- Press and hold Fan **SPEED 1** button for 20 seconds (within 30 seconds of power being turned on). Light should blink 5 times

Factory Reset means all information stored in the receiver is forgotten, including:

- ii- WiFi Network and Password
- iii- Customized device name and location
- iv- Schedule events